

Quick Installation Guide

Wireless N Range Extender

Model No.: EX200

V1.1604

Copyrights © TOTOLINK. All rights reserved. Website: <http://www.totolink.net>
Information in this document is subject to change without prior notice.

Product Introduction

On: The device is starting up or waiting for extending.
Slow-blinking: The device is working normally.
Quick-flashing: The device is to restart.
Off: The device is power off.

WPS: Press the button for about 2-3 seconds to enable WPS.

On: Extending successfully.
Green-Good; Yellow-Normal; Red-Bad.
Slow-blinking: The device is extending to upper Router/AP.
Quick-flashing: The device is to restart.
Off: No extending.

LAN port: This port is used to connect to PC.

Reset: Press the button for about 10 seconds, the device will restore to factory default settings.


NOTE:

EX200's default Network Name (SSID) is TOTOLINK EX200 (no encryption). With success repeater connection, this SSID (TOTOLINK EX200) will change to the same SSID (with same encryption) of upper Router/AP. After deployment, just connect to the Router/AP's SSID. Congratulations, you have extended your WiFi coverage successfully.


Method One: Easy Setup by WPS Button

One-click WPS connection makes it easy to extend the coverage of your existing wireless network.


1 Press the WPS button on the router.

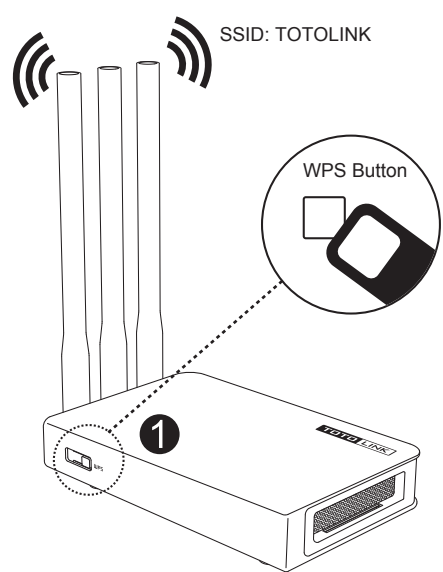

2 Press the WPS button on EX200 for about 2-3s within 2 minutes.

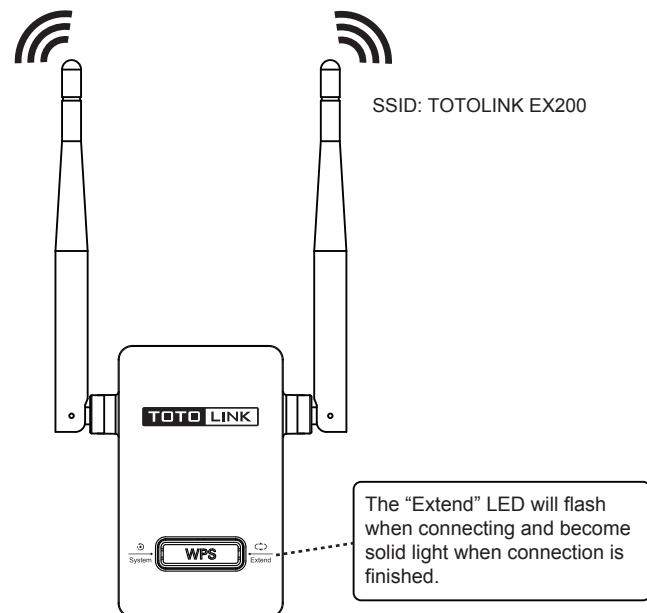

3 Wireless connection is established, the SSID of EX200 will change into the upper router's SSID (TOTOLINK).

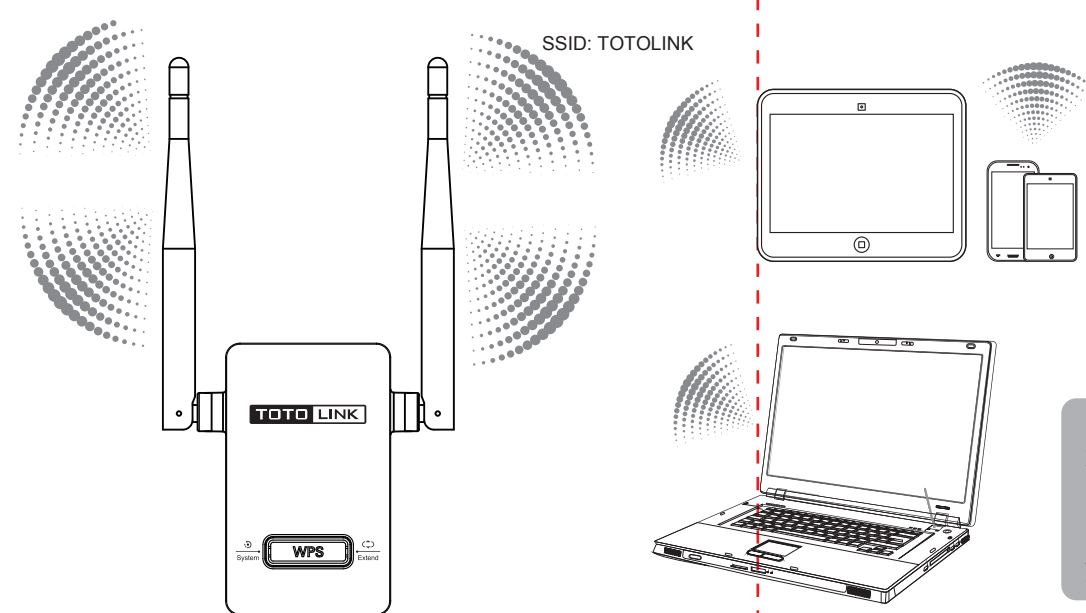


TIPS:

You can put EX200 close to the router to setup WPS connection, then unplug it and place it anywhere within the WiFi coverage. EX200 can remember the last connected AP and firstly connect to it when powered on.


Method Two: Setup via Smart Phone

iOS Phone


1 Click Settings.

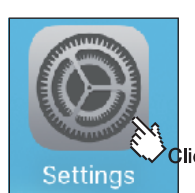

2 Choose Wi-Fi.

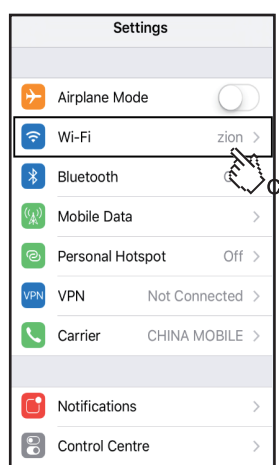


3 Select TOTOLINK EX200 (default SSID), no password required.

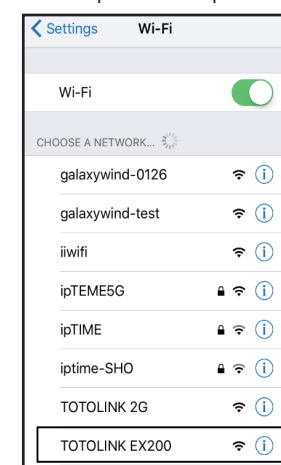


4 After successfully connecting, the Log in page pops up automatically. Click GO.




5 All available SSIDs are displayed. Please choose the one you want to extend its Wi-Fi signal.

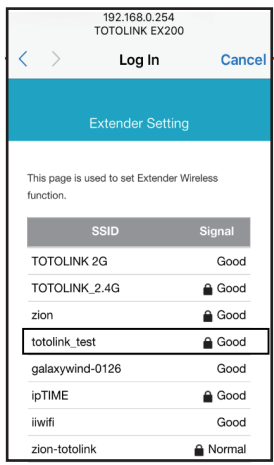


6 Enter the right Key(password). Here you're allowed to setup the EX200's separated SSID and password as you want or keep it the same as upper AP. Click Connect.

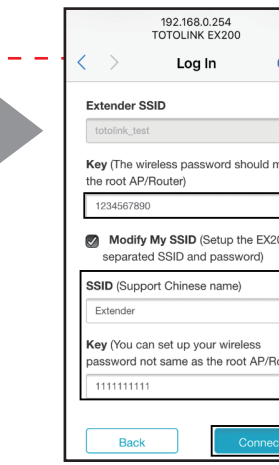


7 Upon a successful connection, the device turns back to the Wi-Fi page automatically. Please choose the extender's new SSID.

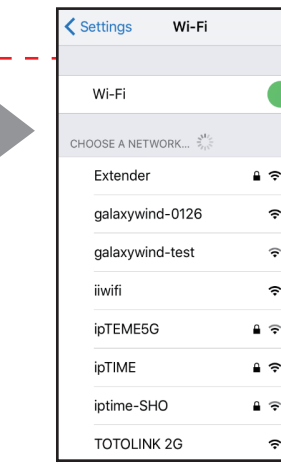

8 Type in the password, click Join.

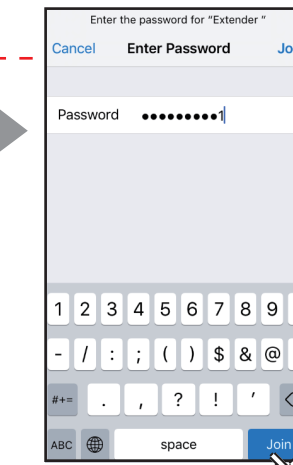

9 Connection Successfully.

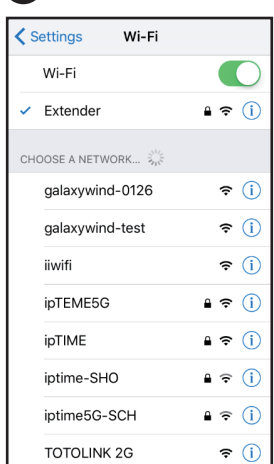

10 Try any website to test the Internet.




Android Phone


1 Click Settings.




2 Choose Wi-Fi.

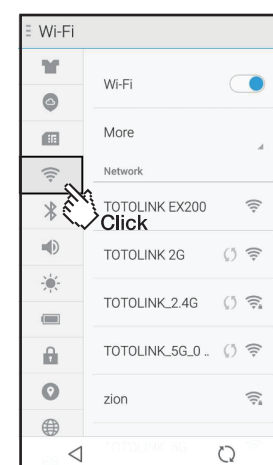


3 Select TOTOLINK EX200 (default SSID), no password required.

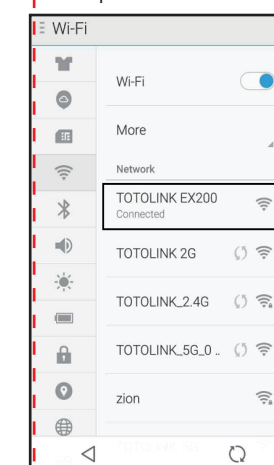


4 After successfully connecting, the Log in page pops up automatically. Click GO.

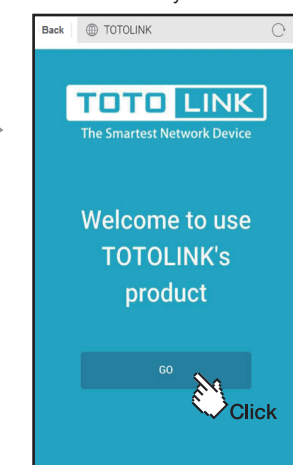


5 All available SSIDs are displayed. Please choose the one you want to extend its Wi-Fi signal.

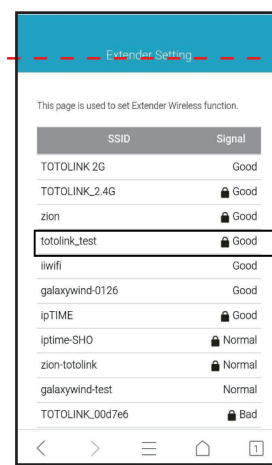


6 Enter the right Key(password). Here you're allowed to setup the EX200's separated SSID and password as you want or keep it the same as upper AP. Click Connect.

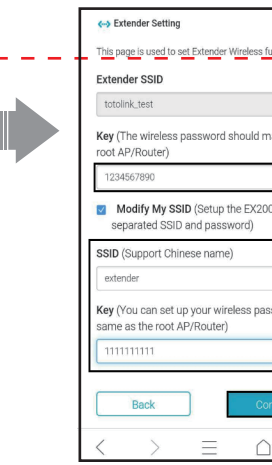


7 Wait for a while, the system reminds you to reconnect Wi-Fi.

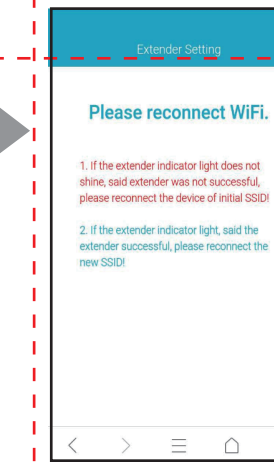


8 Get back to the Wi-Fi page manually, choose EX200's new SSID.

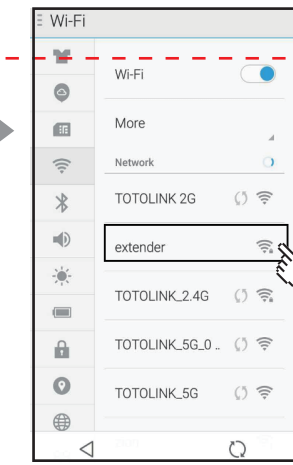

9 Type in the password, click Connect.

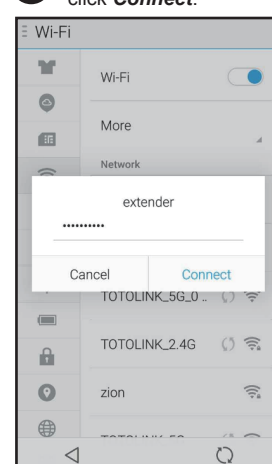

10 Connection Successfully.

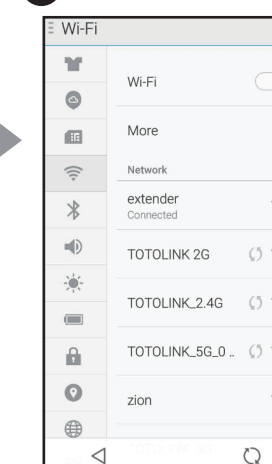

11 Try any website to test the Internet.

